


Hardie™ Trim-Over™ Installation Method

Window Trim Installation Options




SIMPLE CUT


A PACK OUT WITH TWO PIECES OF PLANK AND FLASHING BENEATH WINDOW

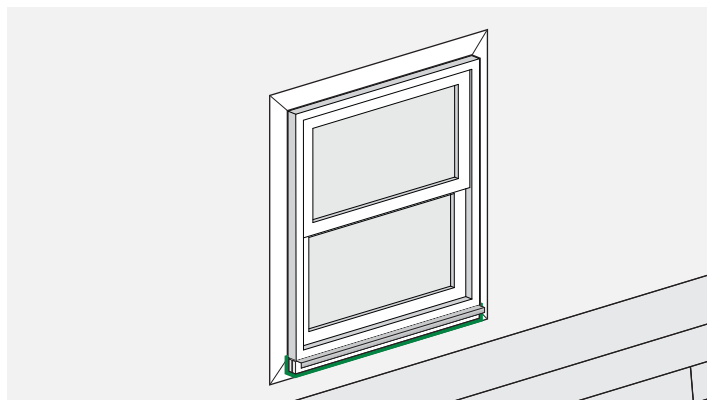


B INSTALL PLANK AND PACK OUT WITH TWO PIECES OF PLANK ABOVE WINDOW

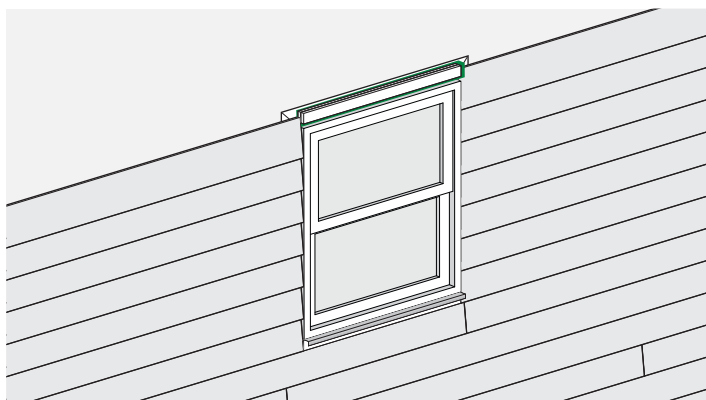


C FASTEN TRIM

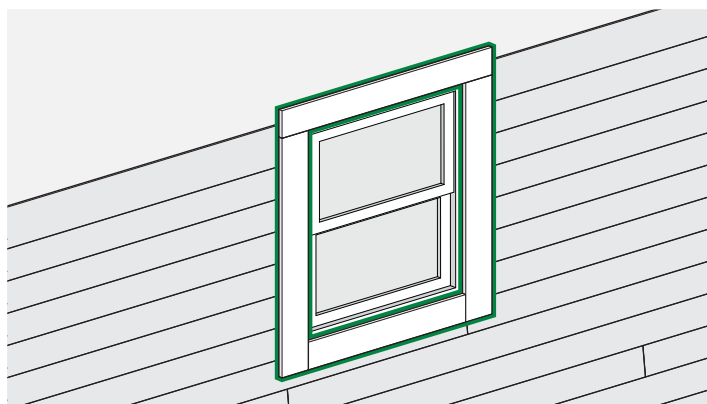


D FASTEN FLASHING

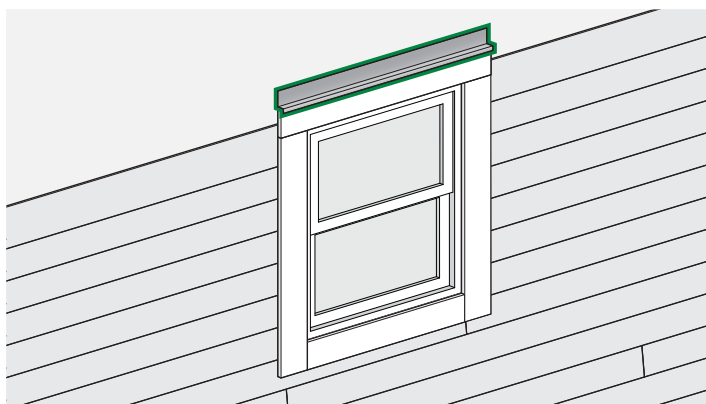


E FASTEN NOTCH CUT PLANK OVER FLASHING

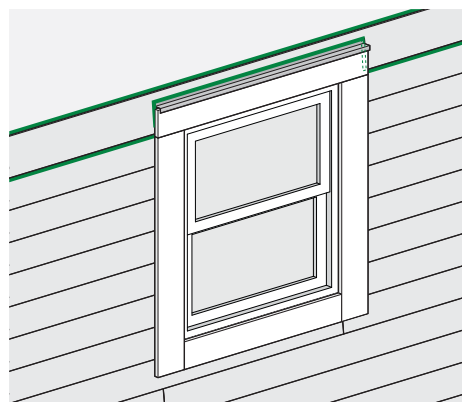

F INSTALL REMAINING PLANKS

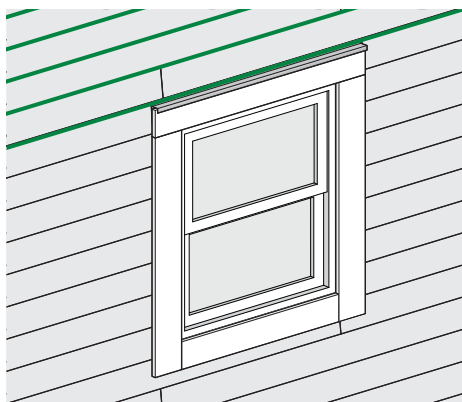

G CAULK END DAMS TO BOTTOM OF LAP

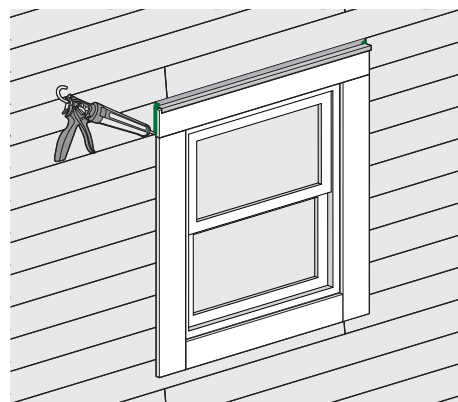


Hardie™ Trim-Over™ Installation Method

Window Trim Installation Options




NOTCH CUT (OPTION A)


A PACK OUT WITH TWO PIECES OF PLANK AND FLASHING BENEATH WINDOW

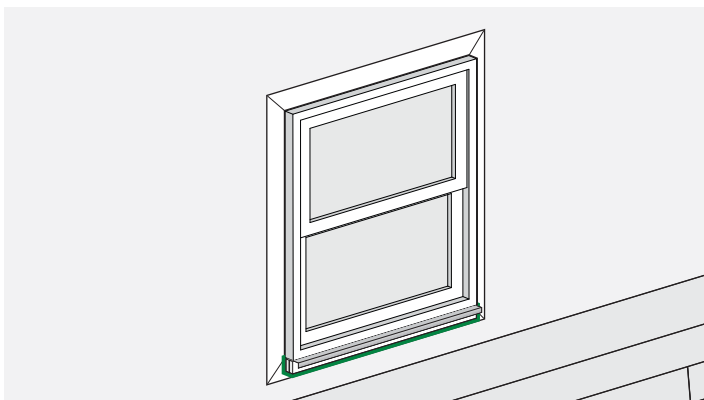


B INSTALL PLANK AND PACK OUT WITH TWO PIECES OF PLANK ABOVE WINDOW

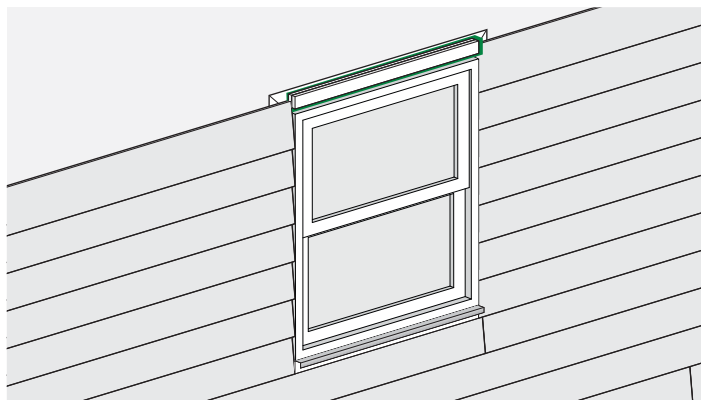


C SLIDE FLASHING INTO NOTCH CUT PLANK

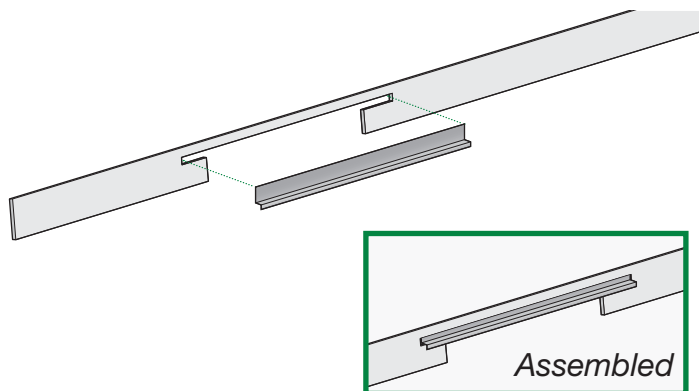


D FASTEN NOTCH CUT ASSEMBLY

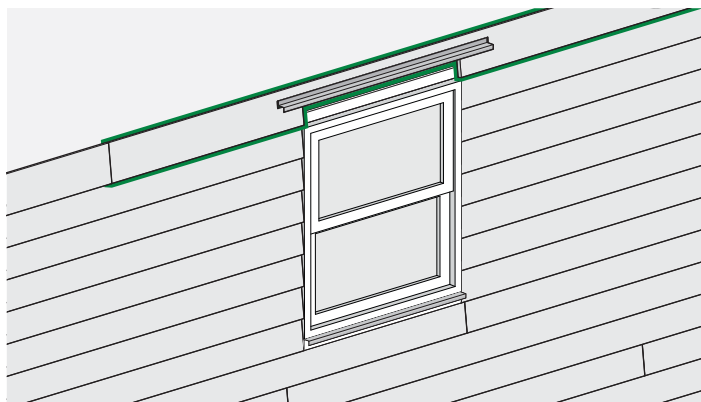

E INSTALL REMAINING PLANKS

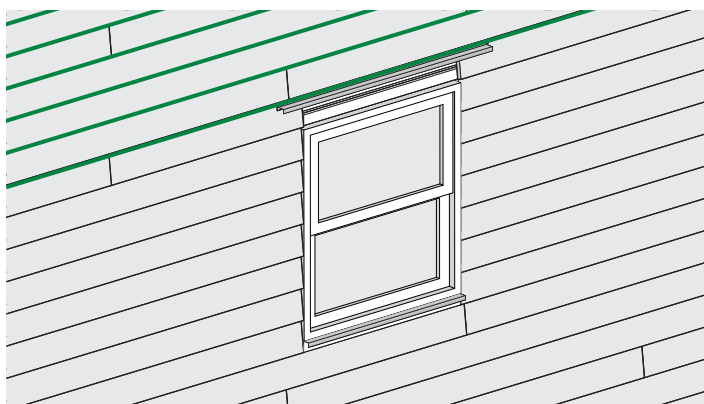

F FASTEN TRIM

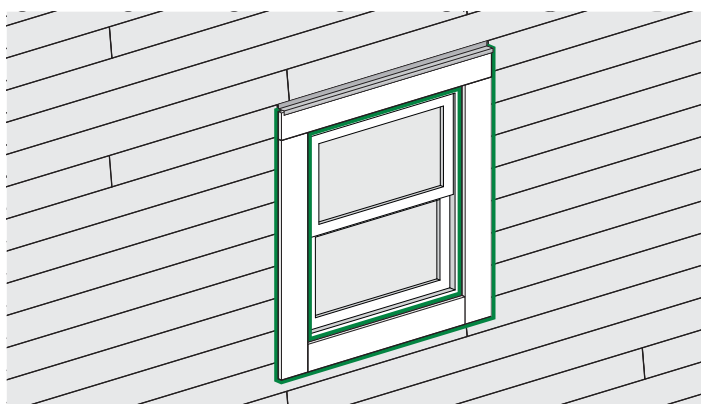


Hardie™ Trim-Over™ Installation Method

Window Trim Installation Options




NOTCH CUT (OPTION B)


A PACK OUT WITH TWO PIECES OF PLANK AND FLASHING BENEATH WINDOW

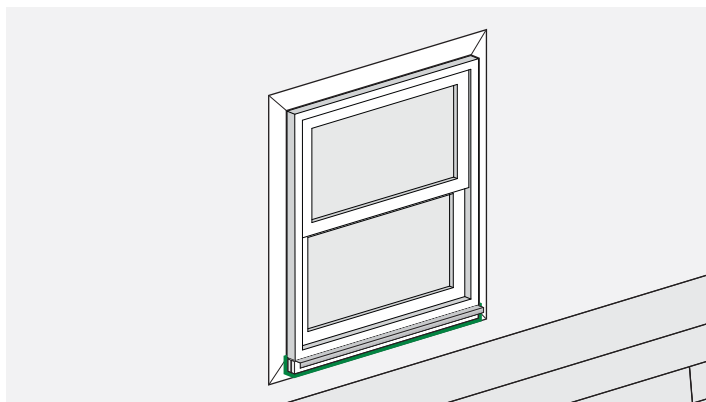


B INSTALL PLANK AND PACK OUT WITH TWO PIECES OF PLANK ABOVE WINDOW

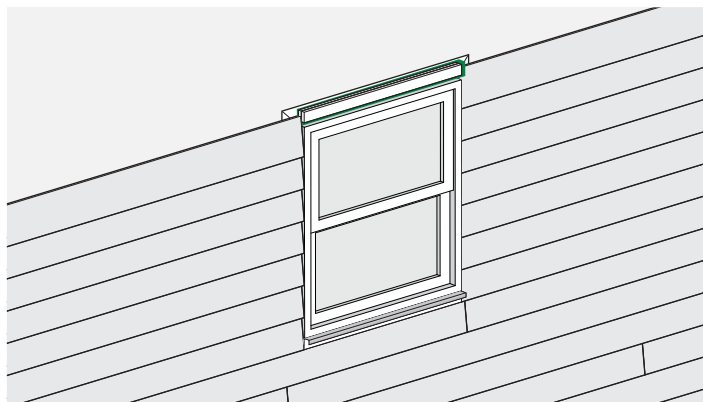


C FASTEN FLASHING

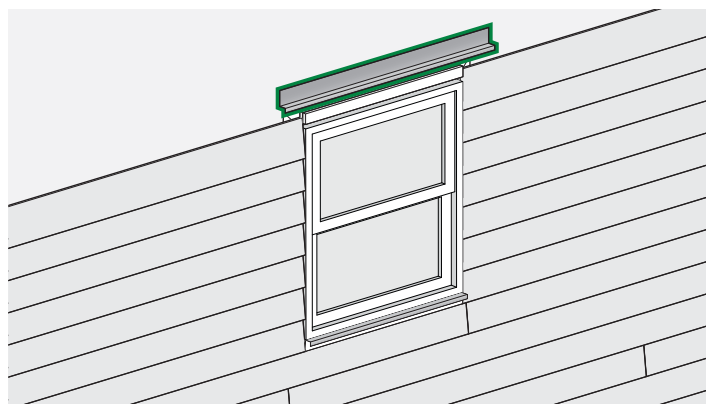


D SLIDE NOTCH CUT PLANK ONTO FLASHING

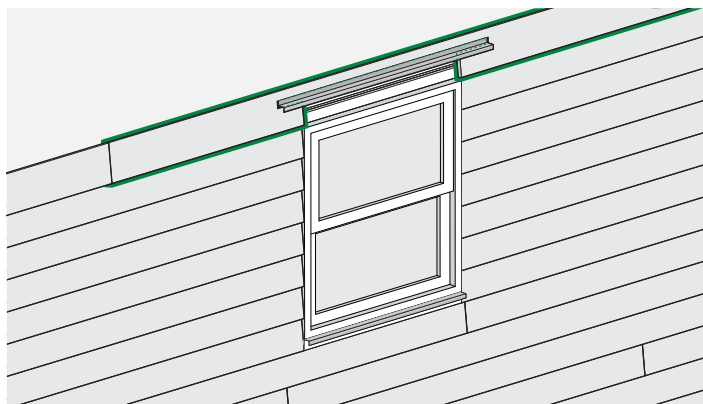

E INSTALL REMAINING PLANKS

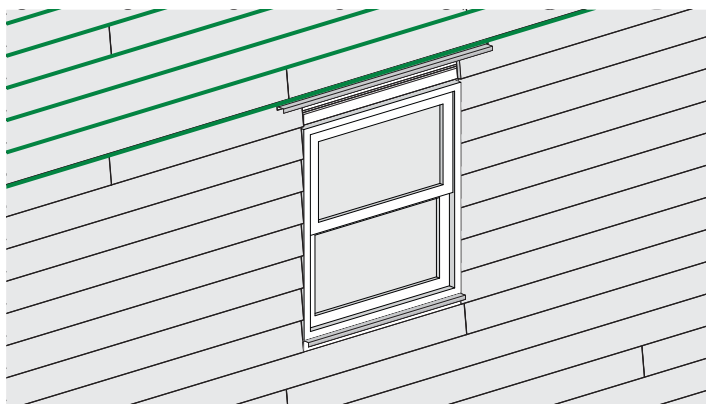

F FASTEN TRIM

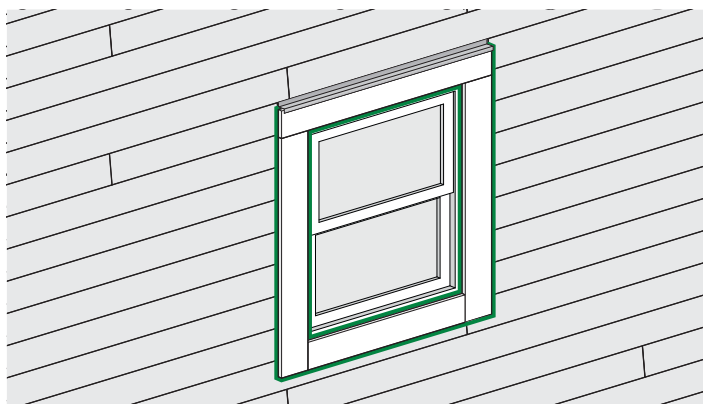


Hardie™ Trim-Over™ Installation Method

Window Trim Installation Options




SIMPLE CUT WITH SLIP SHEET (OPTION A)


A PACK OUT WITH TWO PIECES OF PLANK AND FLASHING BENEATH WINDOW

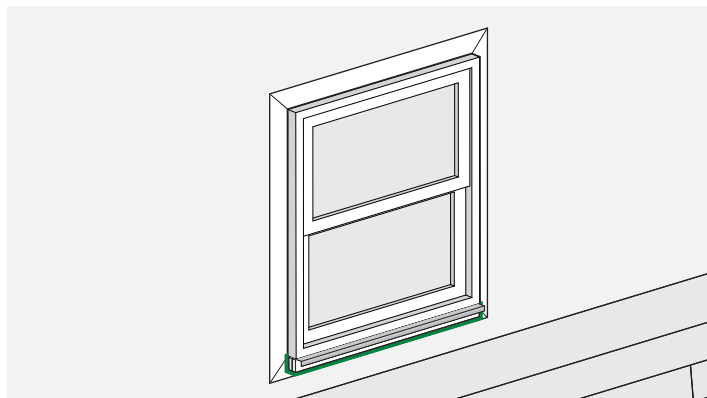


B INSTALL PLANK AND FASTEN JOINT FLASHING AT WINDOW SIDES

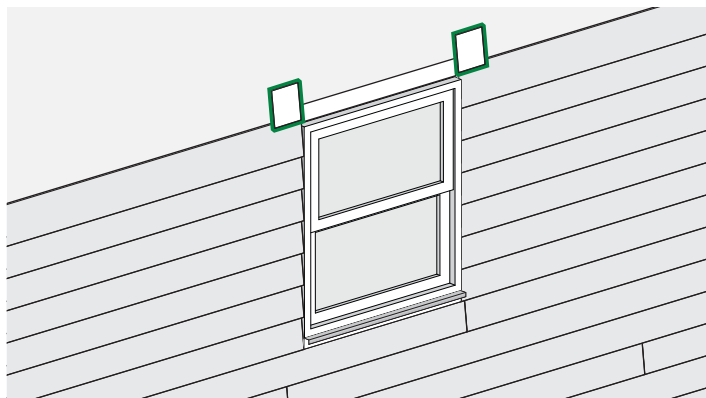


C PACK OUT WITH TWO PIECES OF PLANK ABOVE WINDOW

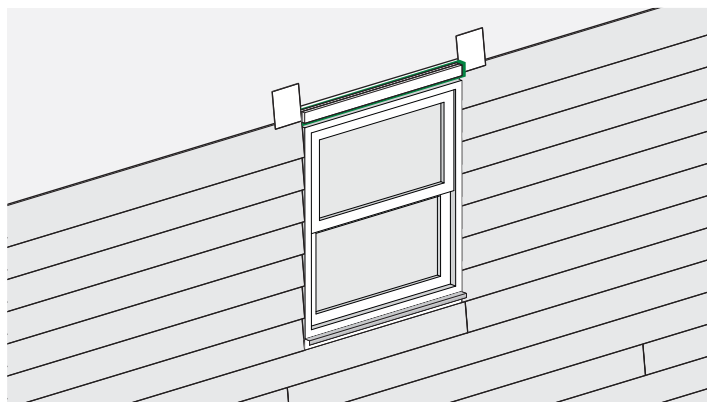


D FASTEN TRIM

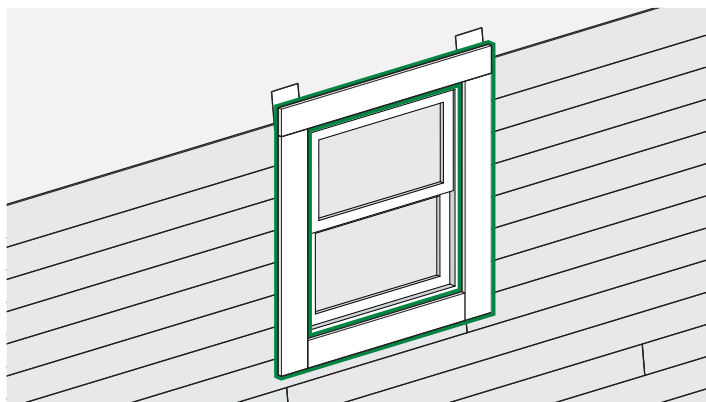


E FASTEN FLASHING

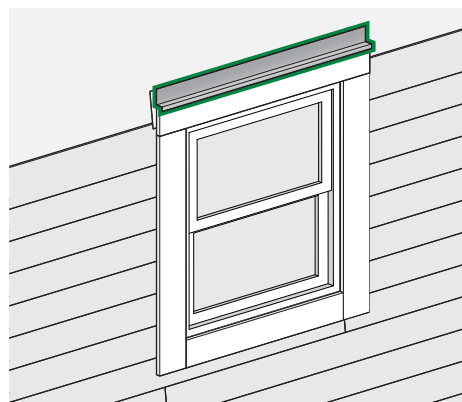

F FASTEN NOTCH CUT PLANK OVER FLASHING

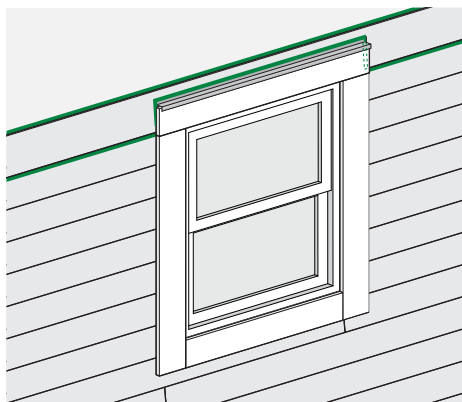

G INSTALL REMAINING PLANKS

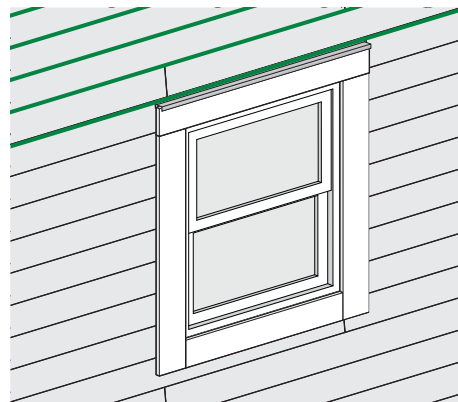


Hardie™ Trim-Over™ Installation Method

Window Trim Installation Options




SIMPLE CUT WITH SLIP SHEET (OPTION B)


A PACK OUT WITH TWO PIECES OF PLANK AND FLASHING BENEATH WINDOW

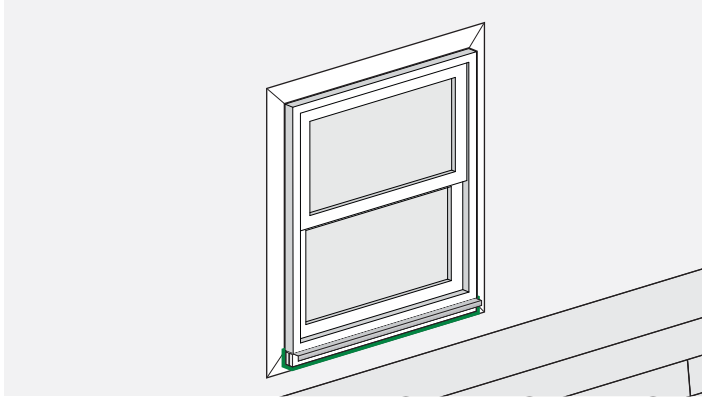


B INSTALL PLANK AND USE TRIM AS GUIDE TO FASTEN FLASHING

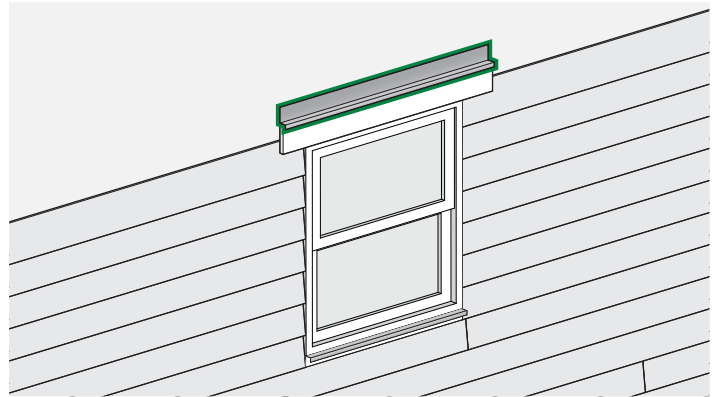


C PACK OUT WITH TWO PIECES OF PLANK

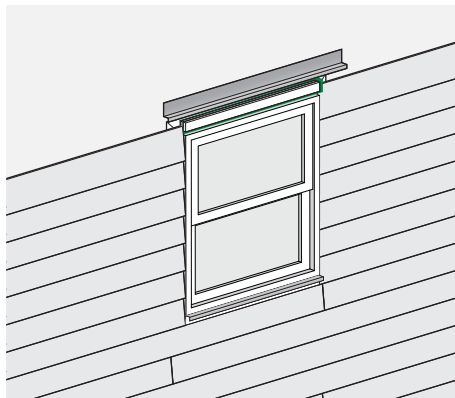


D FASTEN JOINT FLASHING AT WINDOW SIDES

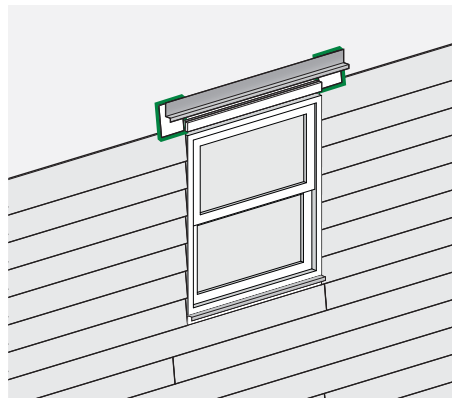


E FASTEN NOTCH CUT PLANK OVER FLASHING

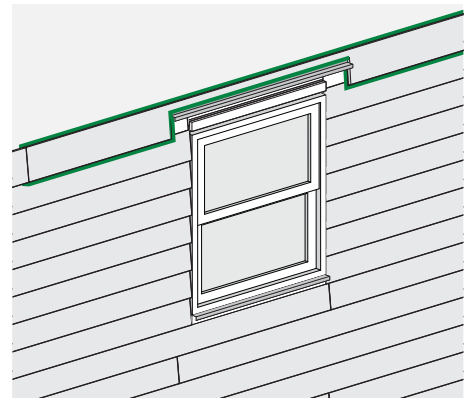

F FASTEN FILLER PLANKS OVER JOINT FLASHING

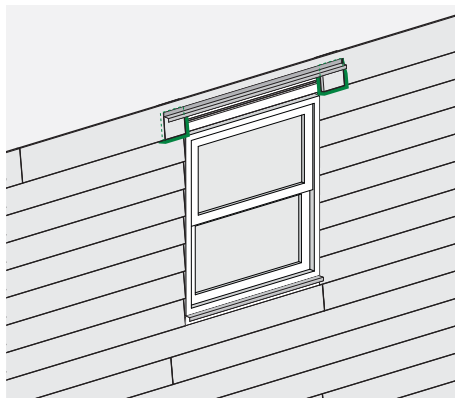

G FASTEN TRIM

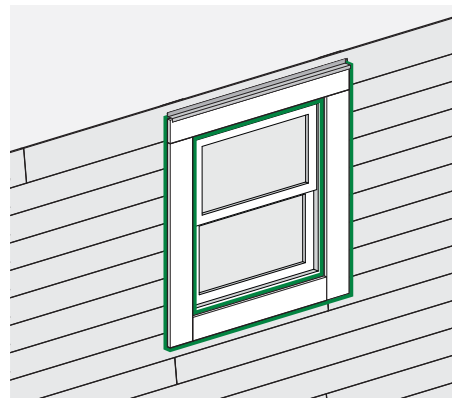

H INSTALL REMAINING PLANKS

